

ULTREX



Yealink W56 Guide

ULTREX

1

Button Functionality:





1: History

See history of inbound/outbound calls.

2: Volume

Adjust volume of phone.

3: Directional Buttons/OK button

Navigate the menu screen.

4: Line Button

Access 'line' functionality

5: Voicemail Button

Check Voicemail. (see on page 5)

6: Transfer Button

Transfer a caller using extension.

7: Mute Button

Mute the microphone while on call.

Voicemail:

(1) Push the Voicemail button or dial *97.

(Example: *97)

(2) Dial your extension, followed by #.

(Example: *97 100 #)

(3) Dial password. Default is 1234. Follow by #.

(Example: *97 100 # 1234 #)

To change voicemail greeting, dial 5.

Transfer to Voicemail:

(1) Press the 'Transfer' button located next to the bottom-left of the screen.

(2) Dial '**' followed by the desired Extension.

(Example: **100)

(3) Press the 'Transfer' button.

This will send the caller to the voicemail of the selected user. The original phone will be open again.

Standard Transfer:

- (1)** Press the 'Transfer' button.
- (2)** Dial desired Extension.
- (3)** Press the 'Transfer' button again.

This will ring the selected user. The original phone will be open again.

Transfer To Voicemail:

- (1)** Press the 'Transfer' button located next to the bottom-left of the screen.
- (2)** Dial '**' followed by the desired Extension.
(Example: **100)
- (3)** Press the 'Transfer' button.

This will send the caller to the voicemail of the selected user. The original phone will be open again.